

**GEN 4 – REV C  
LOCKER INSTALLATION MANUAL**

Locker Type	Model	Locker Type	Model
Main	A4B.E	4 Door	A4G.E
Add On	A4D.E	44 door	A4X.E
All Medium	A4E.E	All Small (w/4 med. doors)	A4M.E
Oversized	A4F.E	Custom Configuration	A4K.E

**STEP 4: MOUNTING SINGLE LOCKERS**

**14-15**



Technical Support: **415-390-0123 x992**

## Step 4: Mounting Single Lockers


It is a requirement to fasten single lockers, placed by themselves, to the wall. This can be accomplished through the usage of our wall bracket kit.

We will provide the wall brackets and standard fasteners to attach the brackets to the wall and lockers. For anything other than stud or hollow wall mounting you will have to procure the proper fastening solution for the wall surface you are mounting to. Ex. concrete anchors


- Level locker per installation guide before installing any mounting brackets.
- Wall bracket kits come with one L bracket, 2 drywall screws, 2 hollow wall toggle anchors with bolts, and 3 sheet metal screws to mount the bracket to the locker and wall.
- Utilize the three sheet metal screws to fasten the bracket to the center of the lockers roof.

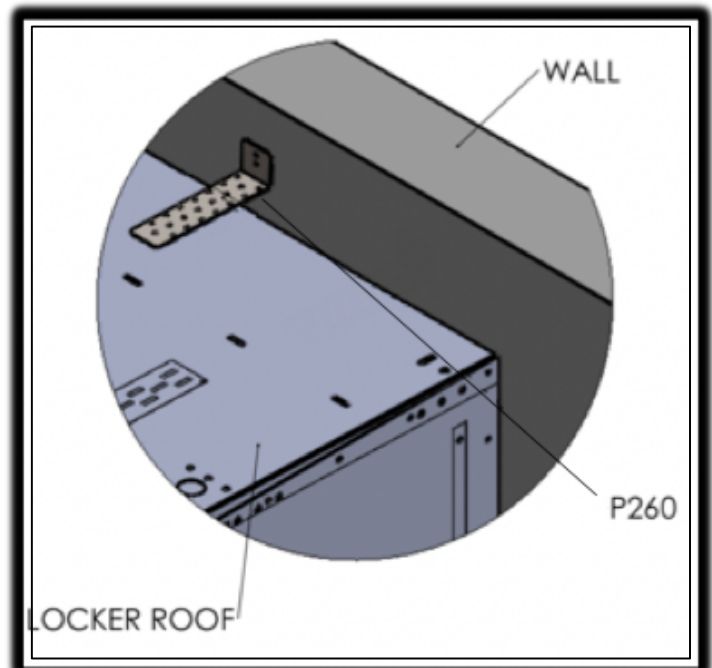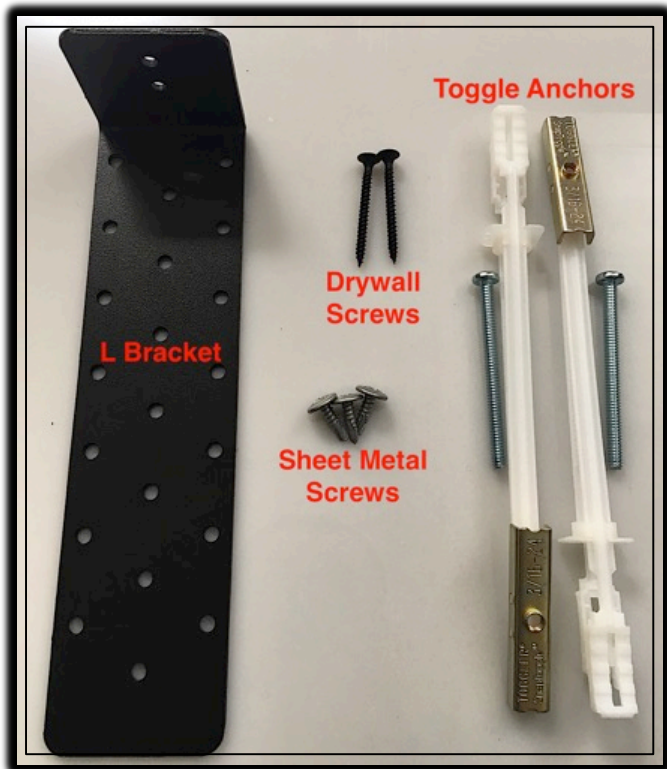


- The drywall screws would be used to mount the bracket directly to a stud in the wall and the toggle anchors would be used to mount to a location on a wall that is hollow. Toggle anchor installation is outlined below.

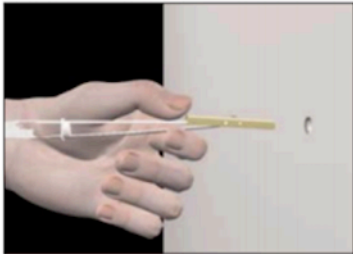


Drill a ½" hole for each anchor. Hold anchor flat alongside plastic straps & slide anchor through the hole and push into the wall

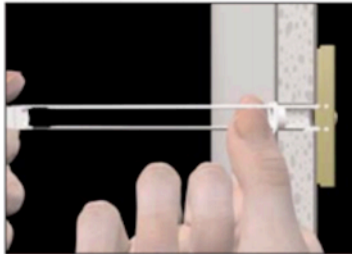

Hold ends of straps together between thumb & forefinger and pull toward you until the anchor rests behind the wall. Once resting, hold the flange against the wall while continuing to pull the straps until tight.

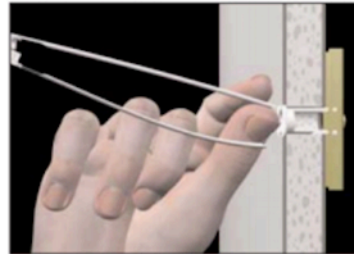

Place thumb between straps at wall. Push thumb side to side, snapping off straps level with the flange.

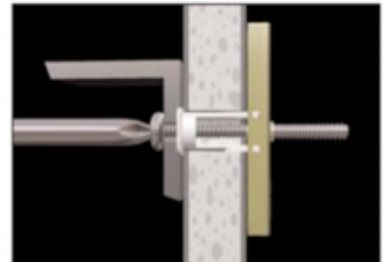

Place item to be mounted over the flanges. Insert the anchor screws and tighten until snug against the bracket.